


Polaris General Windshield

***Make sure you have the stock Cage or this window will not work with your machine.**

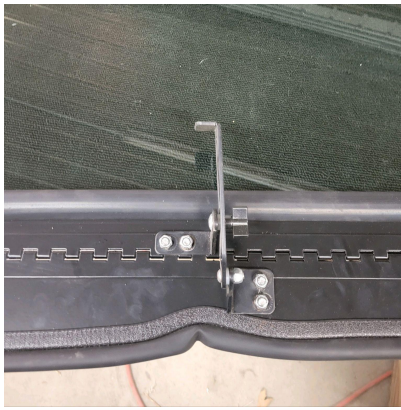

First you will need to pre-assemble your Sliders to the window. This will be your open and close adjustment for the vent on the bottom of the window. Take the thicker L bracket and match up to the holes on the vent portion of the window. The thinner L Bracket will bolt to the window/hinge holes. Bolt to the window and tighten down.

Now, you will need to Remove the Cage Bolt at the top mounting point on both the driver and passenger side. **Before** you do this we suggest you stuff the gap with foam or a rag so you do not lose the stock nut down the body of the machine (trust us once it falls, it's gone forever). Once stuffed, remove the bottom bolt and use the one we provide.



Place the window in place, line up the holes on the bottom of the window frame and put the bolt through and hand tighten the bolts we provided and the stock nut. Leave this loose enough to adjust if needed.

Next take the bracket for the top window mounting with the smaller 1/4-20 bolt and nut. Go through the window and hook to the cross bar area plastic. Once everything is in place you can start to adjust the window where it is needed and tighten the bolts. Do not over tighten. Once all Tightened you are ready to go!

